

520 ELECTRONIC METER

TRUST

Exedy

EXHAUST TEMP METER

取扱説明書


Instruction Manual

TRUST CO., LTD.


MADE IN JAPAN.

TRUST


Parts List:

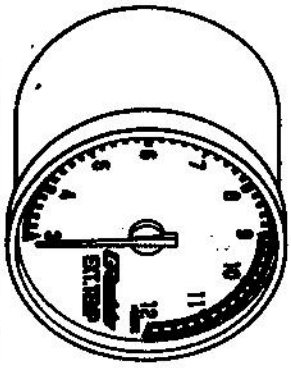


EXHAUST TEMP. METER

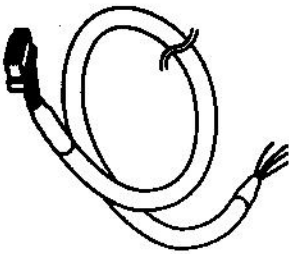

POWER HARNESS 1pc

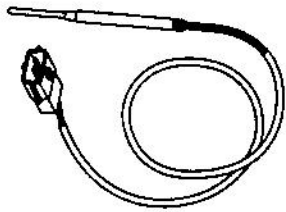

TEMP. SENSOR 1pc.

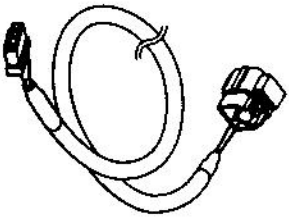


SENSOR HARNESS 1pc




SENSOR FITTING 1pc

Parts List:

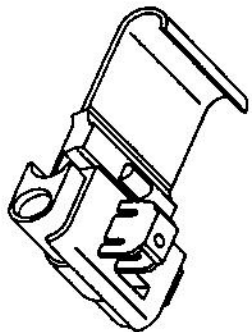

(7) WIRE TIE 4pcs

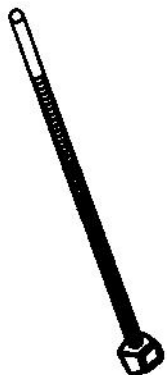

(6) ELECTRICAL TAP 4pcs



(8) INSTRUCTION MANUAL

Installation:

Meter Mounting

Important


When looking for a location to mount the meter, be sure not to have the meter interfere with the driver's view of the road or other important instruments.

Note


Mounting brackets for these warning meters are available for simple installation.

Caution

Never mount the meter facing downward. Always mount the meter horizontally or facing upward. Mounting the meter facing downward can cause the meter to malfunction.

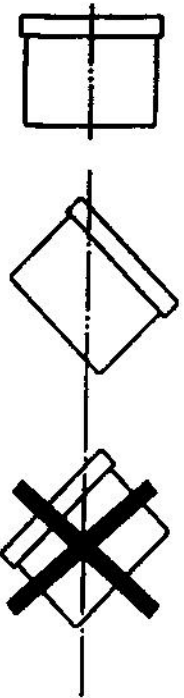


Installation:

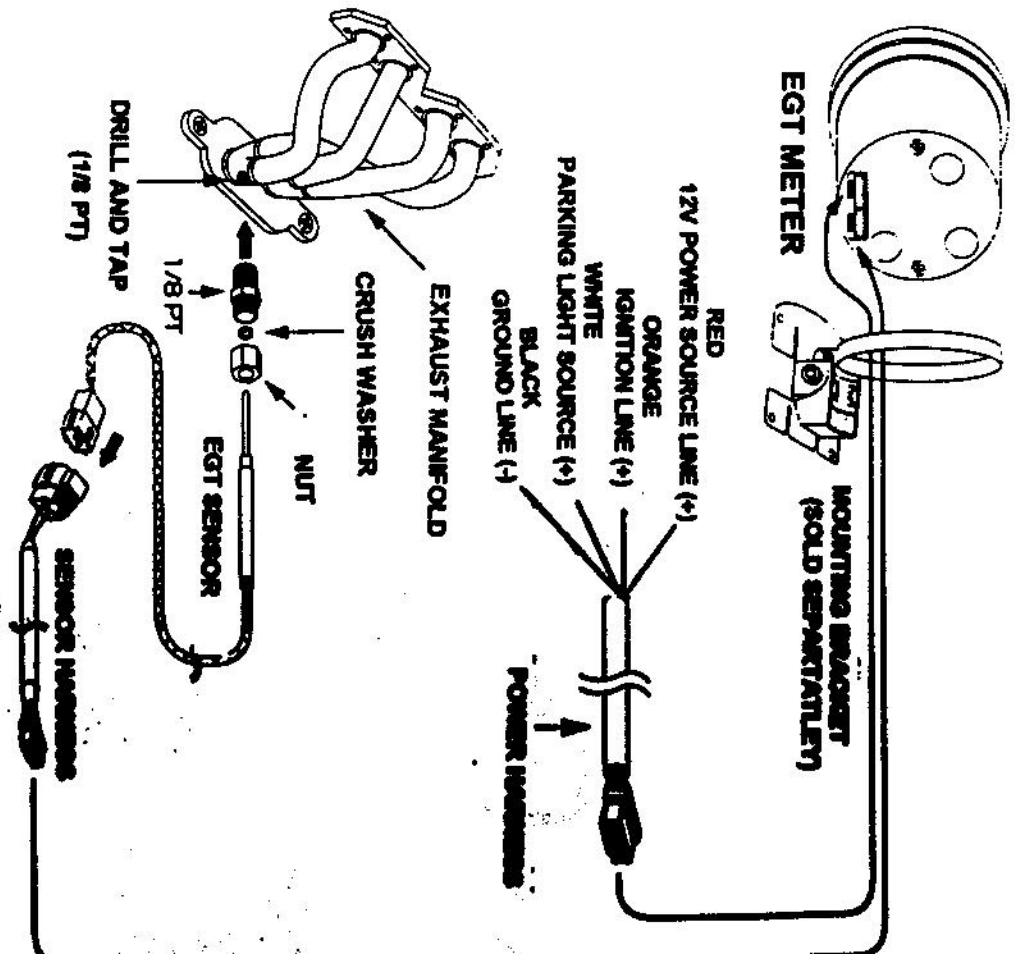

Installation:

Motor Mounting

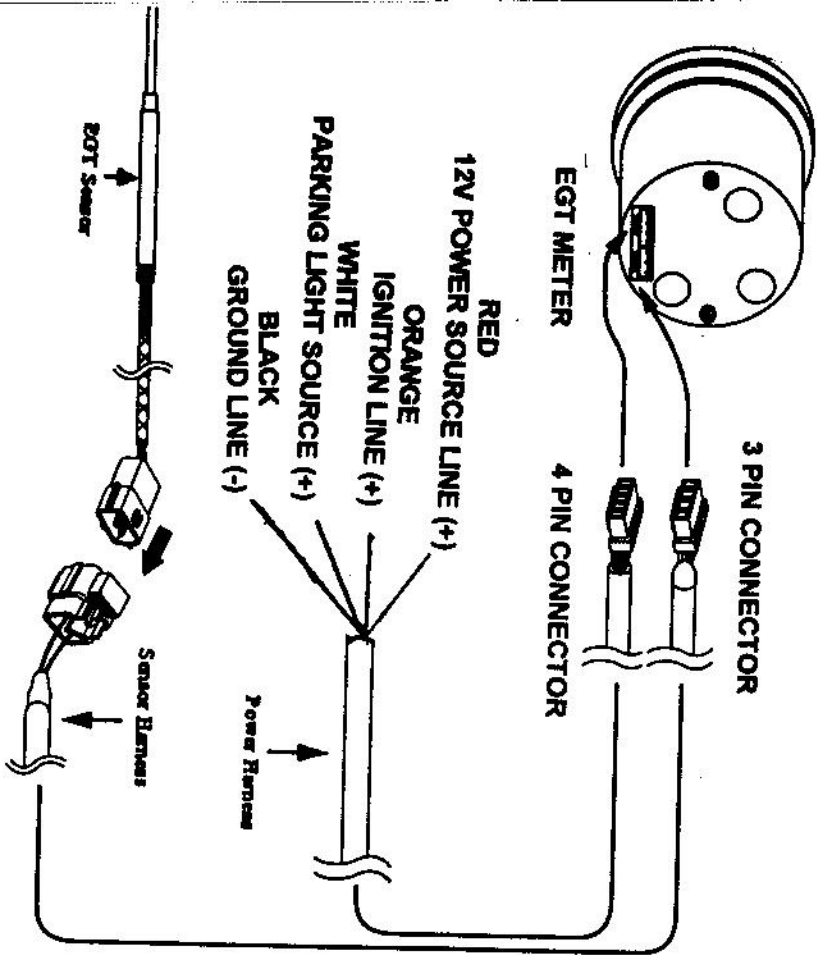

Installation:

